




BTC 1078, BTC 1079, BTC 1083 Instructor-Only Touch Panel

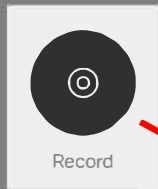


Record

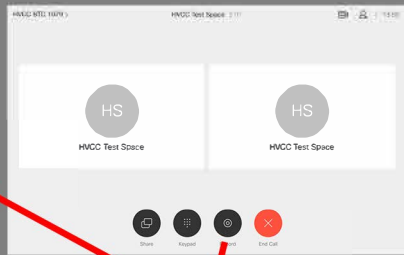


To start recording, touch the Record button

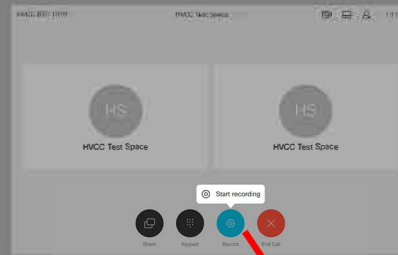


Touch Start Recording

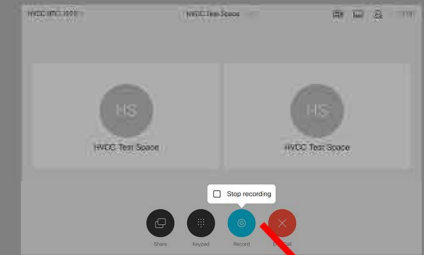


When done, touch Record again then touch Stop Recording

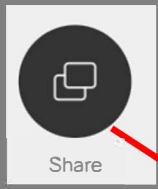


Share

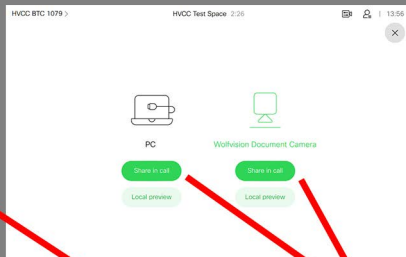

To start sharing, touch Share, then touch Share in Call on desired source
make sure PC/Doc cam is turned on

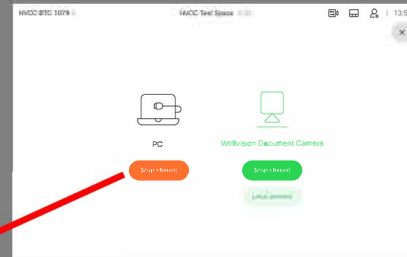


To stop sharing PC, touch Stop Sharing

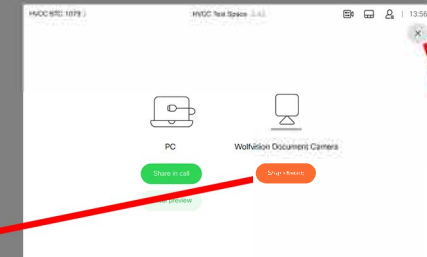


To stop sharing Doc Cam, touch Stop Sharing
To get back to main screen, touch the X




To change camera position, touch the camera in the upper right

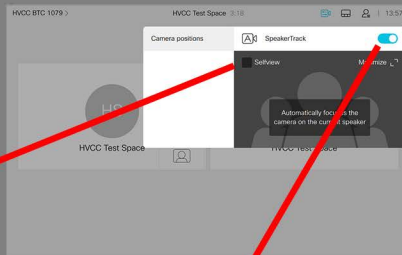

With Speaker Track on, the camera will follow where the speaker is
Make sure Self View is Checked

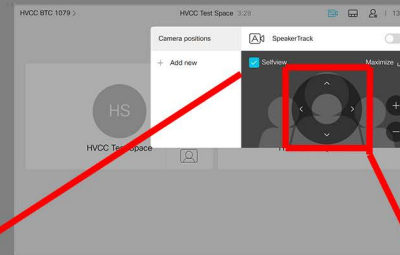

Without Selfview, move the camera position with the arrow keys

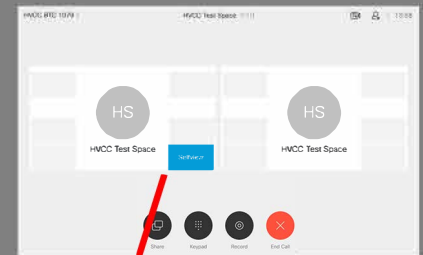


To move Selfview, hold down on the Selfview square until it turns Blue, then move it to any other square

Touch Panel Features

Recording:


To start recording, touch Record and touch Start recording.

An automated voice will indicate that the conference is recording.

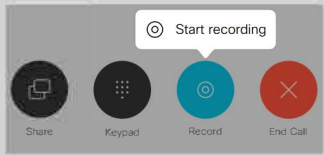


To stop recording, touch Record and touch Stop recording.

An automated voice will indicate that the recording has stopped.

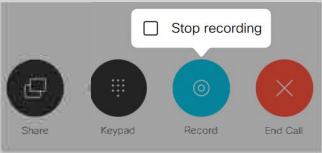

Selfview/Picture-In-Picture (PIP):

To turn PIP on/off, touch camera icon and touch the checkbox next to Selfview

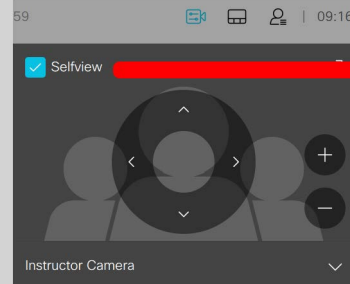


To move PIP, press and hold selfview icon for two seconds until it turns blue, then move PIP to any gray box




To Change Remote Site Layout:

Touch Layout icon 

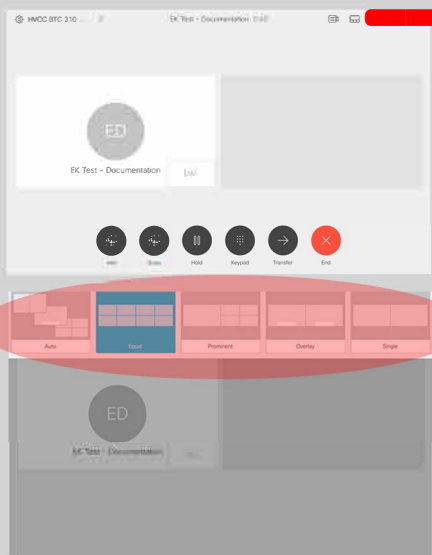

Choose preferred layout

Physical Buttons:

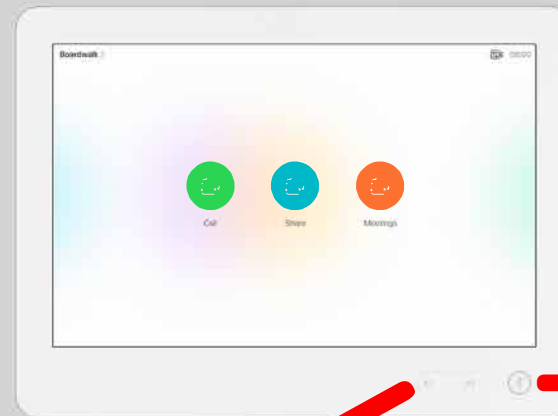

Mute/unmute microphones
Red=Muted
Green=Live

Volume controls for speakers
(remote sites and PC audio)